

# Ergo Boss Ergonomic Chair With Headrest

1



## 3D Armrest | Function key placed under armpad



To adjust the height, simply press the button



For depth adjustment, move the armpad forward or backward



To change the angle, twist the armpad

**\*Reduce arm and shoulder fatigue effectively by making use of the armrest.**

2



## Sliding seat | Function key located on the right hand side of the chair under the seat



To enable the sliding function, pull out the function key located below the seat pan.

**\*The sliding function provides optimal comfort and effective thigh support**

3



## Height - adjustment | Control lever on the right hand side of mechanism



To lower the seat, apply your full weight to the chair while engaging the lever. Once you reach your desired height, release the lever.

To raise the seat, shift your weight onto your feet, then engage the lever. The chair will automatically rise.

4



**Tension tilt | Round control dial on the right hand side of mechanism**



Turn outward/clockwise to increase tension



Turn inward/anti-clockwise to release tension

**\*The chair's tension tilt function enhances both security and comfort, creating a more dynamic seating experience**

5



**Tilt lock in five positions | Control dial on the left hand side of mechism**



To activate the tilt lock, twist the control outward/clockwise



To disengage it, twist the control inward/anti-clockwise

**\*The tilt lock feature enables the user to maintain an upright position for keyboarding, while also providing the option for a comfortable rocking or reclining motion during work, breaks or online meetings**

<b>Height</b>	1270~1310mm
<b>Seat depth</b>	590~630mm
<b>Seat width</b>	650mm
<b>Distance from floor to seat</b>	480~580mm
<b>Backrest width</b>	470mm
<b>Distance from seat to top of backrest</b>	635~683mm
<b>Width between armrest</b>	470mm
<b>Distance from floor to armrest</b>	640~740mm
<b>From seat to armrest</b>	160~220mm
<b>Tilt angle degree</b>	20°